
SERIES HS CHEV S-10, GMC S-15 4X4-V6; W/PS, W/PB, W/AIR PUMP; W/O AC


1984-86


PECULIAR HYDRAULICS BELT DRIVE, SLC UNDERHOOD VALVE HPS4546 REV. C

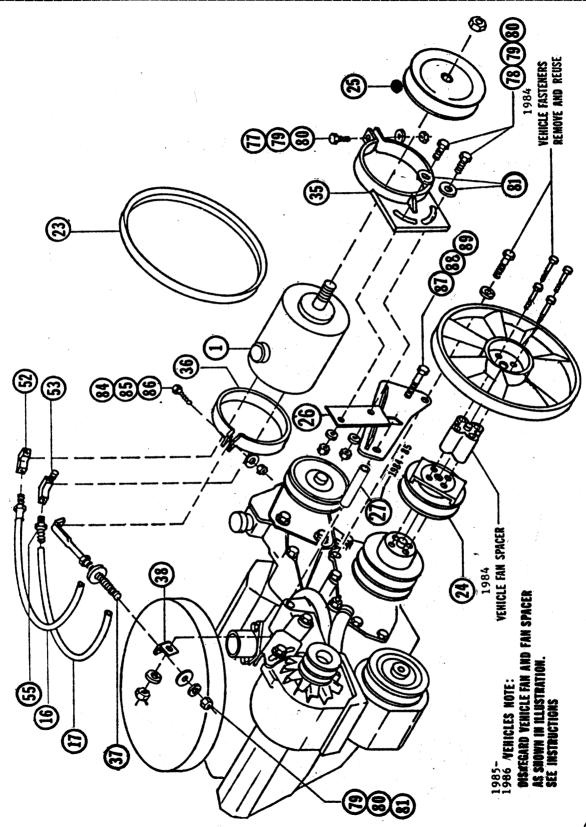

SERIES HS SINGLE LEVER CONTROL - UNDERHOOD VALVE

HPS4546 REV. C

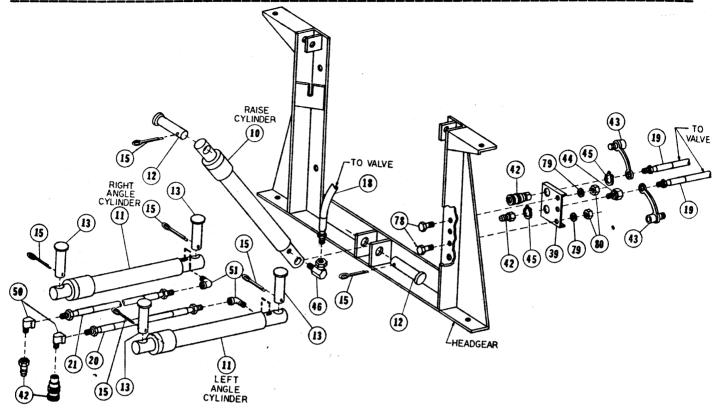

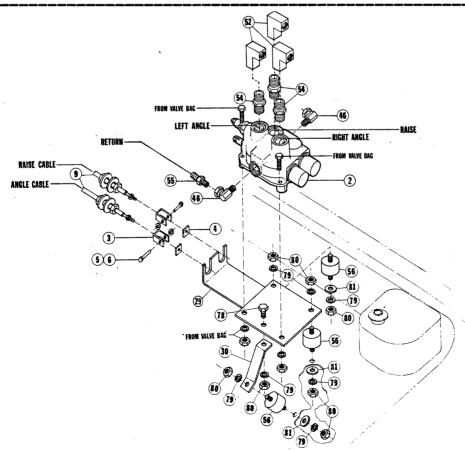

HPS4546 REV. C A5092-25

REF#	QTY IN A5092-25		PART#	DESCRIPTION * PART OF 6942 BOLT BAG		
1	1			PUMP TANK ASSEMBLY		
2	1			CONTROL VALVE ASSEMBLY		
3	2			CLEVIS		
4	2		4494			
5	2			CLEVIS PIN		
6 7	2		4493	PUSH NUT		
8		1	4419	SINGLE LEVER CONTROL HEAD		
9		2	4922	32" CONTROL CABLE, SLC		
10	1		A5096	6" LIFT CYLINDER ASSEMBLY		
11	2		A318			
12	2		6814	CLEVIS PIN		
13 14	4		6816	ANCHOR PIN		
15	6		90601	1/4 X 1-1/2 COTTER PIN		
16		1	2623	48" H.P. HOSE, 1/4P TO 3/8P		
17		1	2549	48" L.P. HOSE		
18		1	5193			
19		2	5715	AON U.D. LICET 1/AD TO 1/AD		
20		1	3074	22" H.P. HOSE, 1/4P TO 1/4P 32" H.P. HOSE, 1/4P TO 1/4P		
21 22		1	376	32" H.P. HOSE, 1/4P TO 1/4P		
23		1	724	FAN BELT 4L 3BO		
24		1	5545			
25		ī	3696			
26		ī	5547			
27 28		ī		* SPACER		
29		1	5504	VALVE PLATE		
30		ī		VALVE PLATE BRACE		
31		•		VALVE FEMILE DIVINCE		
32						
33						
34						
35		1	4921	SADDLE BRACKET		
36	1	•	2036			
3 7	i		2036			
3 8	-	1	2115			
3 9		1				
40		4	4467	DISCONNECT MOUNTING PLATE		
41						
41 42	~		A 1 E 0 7	RICCOMMECT ACCEMBLY		
42 43	2 2		A1587			
	2	•	1588	DUST PLUG		
44		1	4486	· · · · · · · · · · · · · · · · · · ·		
45	4	2	4485			
46	1		319			
47 48 49	2		2315	9/16 O.R. TO 3/8P X 90 SWL.ADPT.		

		HYDRAULICS	PARTS I	_151	HPS45	46 REV.	C	PAG	E 2			
REF#	QTY IN A5092-25	KIT HPS4546	PART#			ESCRIPTI OF 6942		BAG				
50		2	765	*	1/4" BRASS	BAR STR	EET	ELL.				
51	2		2780		1/4" BRASS				FORGED)			
52		4	2318	*	1/4 BRASS	BAR ELL	(F/F)	•			
53		1	3 979	*	3/8 BRASS	BAR STRE	ET E	LL (M	/F)			
54	_	3	3058	*	ADAPTER (9.	/16 D-RI	NG T	0 1/4	>)			
55	2	_	1658		QUILL							
56		3	5529	*	RUBBER SHO	CK MOUNT	-	*				
57 50						FA	STENER TO	RQUE (FT-LB)			
58 59					GRADE DESIGNATION							
60						DIAMETER- THREADS		T -				
61						PER INCH	<u>U</u>	0				
62						1/4 - 20	GRADE 2	GRADE 5	GRADE 8			
63					,	5/16 - 18	6	9	13			
64							11	18	28			
65						3/8 - 16	19	31	46			
66						7/16 - 14	30	50	75			
67						1/2 - 13	45.	75	115			
68						9/16 - 12	66	110	165			
69						5/8 - 11	93	150	225			
70						3/4 - 10	150	250	370			
71						7/8 - 9	150	378	591			
72		1	5704		SAFETY DECA	AL 1 - 8	220	583	893			
73	2		3042		GROMMET				0,3			
74	1	_	4477		SPLIT HOSE	GROMMET	•					
75	3	1	3666	*	TIE WRAPS							
76 77												
77 78	1 3		90054		5/16 X 1-1/				CREW			
79	6	1	90042		5/16 X 1 ()		CAP	SCREW				
80	7	6 6	90360		5/16 LOCKWA			j				
81	Á	3	90332 90313		5/16 (NC) N 5/16 FLATWA							
82	7	J	70313	क ,	7/10 LTHIME	13nek						
83 84			00/11									
85	1 1		90614 90359		1/4 X 1-1/4 (NC) GR.5 CAPSCREW							
86	1		90330		1/4 LOCKWASHER 1/4 (NC) NUT							
87	*	1	90398		1/4 (NL) NL M10 X 1.25		. .	0 000				
88		i			M10 X 1.25		K. U.	o CAP	BLKEW			
89		i	90429		M10 X 1.23 M10 LDCKWAS							
		•	/V7£7	-	HITA FORMME	JF NE. FR			•			

1. CYLINDER AND CLYINDER HOSE ASSEMBLY

- A. USING BENCH VISE TO HOLD LIFT CYLNDER (10), REMOVE CLOSURE FROM PORT. SCREW 90 DEGREE SWIVEL ADAPTER (46) INTO PORT. PLACE LIFT CYLINDER WITH INSTALLED ADAPTER BETWEEN EARS ON UNDERSIDE OF LIFT ARM AND LOWER HEADGEAR EARS. ATTACH CYLINDER TO EARS USING CLEVIS PINS (12) AND COTTER PINS (15).
- B. USING BENCH VISE TO HOLD 22" H.P. HOSE (20), INSTALL BRASS BAR STREET ELL (50) AND FEMALE HALF OF HOSE DISCONNECT ASSEMBLY (42) ON SAME END OF HOSE. THEN, HOLDING 32" H.P. HOSE (21), INSTALL BRASS BAR STREET ELL (50) AND MALE HALF OF HOSE DISCONNECT ASSEMBLY (42) ON THE SAME HOSE END.
- C. USING BENCH VISE TO HOLD ANGLE CYLINDERS (11), REMOVE CLOSURES FROM PORTS AND SCREW BRASS FORGED STREET ELLS (51) INTO PORTS SO THAT ELLS ARE PARALLEL WITH CYLINDER AND POINT TOWARD LIVE END. INSTALL 22" H.P. HOSE WITH FEMALE DISCONNECT HALF TO DRIVER'S SIDE ANGLE CYLINDER STREET ELL. INSTALL OTHER H.P. HOSE WITH MALE DISCONNECT HALF TO PASSENGER SIDE ANGLE CYLINDER STREET ELLS. INSTALL ANGLE CYLINDERS TO "A" FRAME ON THEIR RESPECTIVE SIDES SO THAT ELLS ARE BETWEEN CYLINDERS AND "A" FRAME. SECURE CYLINDERS WITH ANCHOR PINS (13) AT PORT END AND RAM END. SECURE ANCHOR PINS WITH COTTER PINS (15).
- 2. CONTROL HEAD AND CONTROL CABLES.

NOTE: DASH BRACKET, HARDWARE, DRILLING GUIDE AND MOUNTING INSTRUCTIONS WILL BE FOUND IN PECULIAR ATTACHING BOX.

- A. DRILL THREE 5/8" HOLES IN FIREWALL FOR CONTROL CABLES AND WIRING HARNESS USING DRILLING GUIDE AS A REFERENCE ONLY. THERE ISN'T MUCH ROOM TO DRILL ON THIS VEHICLE SO BE SURE THAT BOTH SIDES OF FIREWALL ARE CLEAR OF OBSTRUCTIONS, WIRES, ETC.
- B. INSTALL DASH BRACKET AS PER DASH BRACKET INSTRUCTIONS.
- C. LOOSEN JAM NUTS ON CONTROL HEAD END OF CABLES (9) AND INSTALL INTO SLOTS IN CONTROL HEAD (8). (RAISE CABLE CENTERS IN BEGINNING OF LOWER SLOT). SNAP CABLE ENDS ONTO BALL STUDS AND TIGHTEN JAM NUTS TO SECURE CABLES TO CONTROL HEAD. REMOVE THE NUTS AND WASHERS FROM THE VALVE END OF THE CABLES. ROUTE THE CABLES OUT THROUGH THE DRILLED HOLES IN THE FIREWALL AND UP TO THE AREA BETWEEN THE BRAKE LINES AND WINSHIELD WASHER BOTTLE. ATTACH CONTROL HEAD TO DASH BRACKET AS PER DASH BRACKET INSTRUCTIONS. INSTALL RUBBER GROMMETS (73) AROUND CABLES WHERE THEY PASS THROUGH FIREWALL.

3. VALVE AND VALVE PLATE

A. USING BENCH VISE TO HOLD CONTROL VALVE ASSEMBLY (2) REMOVE CLOSURES FROM VALVE PORTS. SCREW 90 DEGREE SWIVEL ADAPTER UNIONS (47) INTO "IN" AND "OUT" PORTS. SCREW QUILL (55) INTO INSTALLED ADAPTER IN "OUT PORT. NOTE: VALVE FITTINGS ARE INSTALLED AS DESCRIBED TO INSURE PROPER INSTALLATION. FIRST INDICATION OF

FISHER ENGINEERING, ROCKLAND, ME 04841 SUBJECT TO CHANGE 1/18/89

INCORRECT INSTALLATION IS FAILURE OF PLOW TO LIFT ALTHOUGH PLOW WILL ANGLE.

- B. INSTALL THREE 9/16 O-RINGS TO 1/4 P. ADAPTERS (54) IN THE LIFT AND ANGLE PORTS OF VALVE. INSTALL ONE 1/4" ELL (52) TO EACH OF THESE THREE ADAPTERS. THE 1/4" ELLS SHOULD POINT AWAY FROM THE CABLE END OF VALVE.
- C. CONNECT CONTROL CABLES TO VALVE PLATE (29) BEFORE FASTENING VALVE PLATE TO VEHICLE. BEGIN BY REINSTALLING JAM NUTS AND WASHERS ON CABLES. PLACE CONTROL CABLES IN RESPECTIVE SLOTS OF VALVE PLATE BULKHEAD WITH ONE NUT AND ONE WASHER ON EACH SIDE OF BULKHEAD. CENTER CABLES ON BULKHEAD FOR MAXIMUM ADJUSTMENT IN BOTH DIRECTIONS.
- D. ATTACH THE VALVE PLATE BRACE (30) TO THE CENTER HOLE ON THE PASSENGER SIDE OF THE VALVE PLATE WITH ONE 5/16 X 1 CAPSCREW (78), LOCKWASHER (79) AND NUT (80). POSITION VALVE PLATE SO THAT PLATE AND VALVE (WHEN INSTALLED) WILL CLEAR ANY OBSTRUCTIONS. MARK THREE MOUNTING HOLE LOCATIONS (TWO HOLES ON DRIVERS SIDE OF VALVE PLATE, ONE AT END OF VALVE PLATE BRACE) AND DRILL TO 11/32". INSTALL THREE RUBBER SHOCK MOUNTS (56) BETWEEN VALVE PLATE AND FENDERWELL. SECURE EACH SHOCK MOUNT TO THE FENDERWELL WITH ONE 5/16" FLATWASHER (81), LOCKWASHER (79) AND NUT (80). SECURE THE VALVE PLATE AND VALVE PLATE BRACE TO THE RUBBER SHOCK MOUNT WITH THREE 5/16 LOCKWASHERS (79), AND NUTS (80).
- E. MOUNT VALVE TO VALVE PLATE USING TWO 1/4 X 1-1/4 CAPSCREWS, LOCKWASHERS AND NUTS FROM VALVE BAG. CENTER CABLES IN SLOTS SO THAT THEY ARE EXACTLY IN LINE WITH VALVE SPOOL CENTERS. ATTACH CABLE CLEVIS (3) TO CABLES USING SQUARE NUTS (4). SLIP CABLE CLEVISES OVER SPOOLS. INSTALL CLEVIS PIN (5) THROUGH CLEVIS AND SPOOL AND SECURE WITH PUSHNUT (6) ON CLEVIS PIN. ADJUST CABLES SO THAT CONTROL LEVER IS CENTERED BETWEEN BOTH ANGLE AND RAISE/LOWER POSITIONS. IF CABLE CLEVIS DOES NOT ALLOW ENOUGH ADJUSTMENT, REPOSITION CABLE AT VALVE PLATE BULKHEAD. AFTER CHECKING TO SEE THAT THE VALVE SPOOLS ARE IN THE CENTERED POSITION, TIGHTEN CABLE CLEVIS NUTS.

CAUTION: VALVE SPOOLS MUST BE FREE AND SELF CENTERING WHEN CABLES AND CONTROL HEAD ARE ATTACHED. FAILURE TO CENTER SPOOLS WILL RESTRICT FLUID FLOW THROUGH VALVE. THIS MAY CAUSE HYDRAULIC FLUID TO OVERHEAT RESULTING IN PUMP DAMAGE AND OR HYDRAULIC HOSE FAILURE. HOSE FAILURES CAN CAUSE ENGINE FIRES.

WHEN ADJUSTED, THE CONTROL LEVER MUST BE IN THE NEUTRAL POSITION TO ALLOW ENOUGH SPOOL TRAVEL EACH WAY FOR PROPER VALVE ACTUATION.

4. DRIVE SHEAVE INSTALLATION

A. 1984 VEHICLES: REMOVE UPPER HALF OF FAN SHROUD. LOOSEN ALTERNATOR AND POWER STEERING BELTS. REMOVE FAN AND FAN SPACER. INSTALL FISHER DRIVE SHEAVE (24) ON OVER WATER PUMP PILOT AND HUB OF 3 GROOVE SHEAVE. PLACE 4L 380 FAN BELT (23) ON OVER DRIVE SHEAVE. (CANNOT BE INSTALLED AFTER FAN IS IN PLACE). REINSTALL

FISHER ENGINEERING, ROCKLAND, ME 04841 SUBJECT TO CHANGE 1/18/89

VEHICLE FAN SPACER, FAN AND FAN SHROUD USING ORIGINAL FASTENERS TORQUED TO 18 FT. LBS.

1985-1986 VEHICLES: REMOVE UPPER HALF OF FAN SHROUD. LOOSEN ALTERNATOR AND POWER STEERING BELTS. REMOVE CLUTCH FAN AND VEHICLE PULLEYS FROM WATER PUMP SHAFT FLANGE. BACK STUDS IN FLANGE OUT UNTIL ENDS OF STUDS ARE EVEN WITH BACK SIDE OF FLANGE. REINSTALL VEHICLE PULLEYS, FISHER DRIVE SHEAVE AND FAN BACK ON OVER STUDS AND PILOT. FASTEN WITH ORIGINAL NUTS AND WASHERS TORQUED TO 18 FT. LBS. INSTALL FAN BELT ON OVER FAN AND ONTO DRIVE SHEAVE. REINSTALL UPPER HALF OF FAN SHROUD.

5. PUMP TANK AND PUMP BRACKET

- A. STANDING IN FRONT OF VEHICLE LOOKING AT ENGINE, REMOVE ONE BOLT FROM THE WATER PUMP TIMING CHAIN COVER AT ABOUT THE 2 OR 3 O'CLOCK POSITION. (JUST TO THE PASSENGER SIDE OF THE ALTERNATOR BRACKET). INSTALL PUMP BRACKET (26) TO FRONT OF WATER PUMP—TIMING CHAIN COVER WITH REMOVED BOLT. ALIGN HOLE IN TOP END OF PUMP BRACKET WITH VACANT HOLE IN ALTERNATOR MOUNTING BRACKET. (NOTE: 1984—85 VEHICLES REQUIRE USING SPACER (27) IN THE VACANT BRACKET HOLE TO ASSURE PROPER INSTALLATION. FASTEN USING ONE M10 X 1.25 X 100 CAPSCREW (87), LOCKWASHER (89) AND NUT (88). PLACE UNVIERSAL BRACE TAB (38) ON OVER END OF M10 CAPSCREW AND SECURE WITH ONE M10 LOCKWASHER (89) AND M10 NUT (88). BRACE TAB SHOULD POINT UP AT ABOUT A 45 DEGREE ANGLE TOWARDS THE DRIVERS SIDE. TIGHTEN BOTH BOLTS. TIGHTEN ALTERNATOR AND POWER STEERING BELTS.
- B. HOLDING PUMP TANK (1) IN BENCH VISE, SCREW 1/4" BRASS BAR ELL (52) ONTO PRESSURE PORT AND SCREW 3/8" BRASS BAR STREET ELL (53) INTO RETURN PORT. SCREW QUILL (55) INTO ELL JUST INSTALLED IN RETURN PORT. WHEN LOOKING AT THESE FITTINGS ON THE BACK OF THE PUMP THEY SHOULD POINT TO THE 1 O'CLOCK POSITION. INSTALL PUMP SHEAVE (25) ONTO PUMP SHAFT USING LOCKNUT SUPPLIED WITH PUMP. REMOVE PUMP FROM VISE AND INSTALL SADDLE BRACKET (35) ON OVER FRONT OF PUMP. SECURE WITH A 5/16 X 1-1/2 GR. 5 CAPSCREW (77), LOCKWASHER (79) AND NUT (80). ATTACH SADDLE BRACKET AND PUMP TO PUMP BRACKET USING TWO 5/16 X 1 CAPSCREWS (78), FLATWASHERS (81), LOCKWASHERS (79) AND NUTS (80).
- C. SLIP 38" V-BELT ON OVER INSTALLED DRIVE AND PUMP SHEAVES. ALIGN SHEAVES AND TIGHTEN 1-1/2" SADDLE BRACKET FASTENER. ADJUST FOR PROPER TENSION BY PIVOTING SADDLE BRACKET ON TOP BOLT. INSTALL REAR TANK STRAP (36) ON OVER REAR OF PUMP AND ALIGN WITH PREVIOUSLY INSTALLED BRACE TAB. MEASURE OR GAUGE NEEDED LENGTH OF UNIVERSAL BRACE ROD (37) AND CUT TO THAT LENGTH. INSTALL ONE 5/16 NUT (80) AND FLATWASHER (81) ONTO BRACE ROD. INSTALL BENT END OF BRACE ROD BETWEEN EARS OF TANK STRAP WHILE INSERTING OTHER END THROUGH LIFT HOOK ON ENGINE. FASTEN BRACE ROD TO EARS OF TANK STRAP WITH A 1/4 X 1-1/4 CAPSCREW (84), LOCKWASHER (85) AND NUT (86). FASTEN OTHER END OF BRACE ROD TO LIFT HOOK WITH A 5/16 FLATWASHER (81), LOCKWASHER (79) AND NUT (80). USE BRACE ROD TO ADJUST ALIGNMENT OF DRIVE AND PUMP SHEAVES. CHECK BELT FOR PROPER TENSION. TIGHTEN POWER STEERING AND ALTERNATOR BELTS.

FISHER ENGINEERING, ROCKLAND, ME 04841 SUBJECT TO CHANGE 1/18/89