



FISHER ENGINEERING

P.O. Box 529 Rockland, Maine 04841

April 17, 2002
Lit. No. 27622

XBLADE™ Lift Chain Adjustment

⚠ CAUTION


Read this document before installing the snowplow.

⚠ CAUTION

See your FISHER® outlet for application recommendations. The Kit Selection Guide has specific vehicle and snowplow requirements.

To prevent the snowplow from blocking the snowplow headlamps during travel, adjust lift chain using the following steps:

1. With A-frame level and lift cylinder collapsed, attach one end of the lift chain to the A-frame using a 3/8" U-bolt, lockwasher and nut.
2. Pass the loose end of the chain through the stop link on the lift arm and adjust the chain to the minimum length indicated by the chart below. (Chain will be slack)
3. Attach the loose end of the lift chain to the other side of the A-frame using a 3/8" U-bolt, lock washer and nut. Chain must be same length used in step 2.
4. Fully tighten U-bolts before lifting blade.

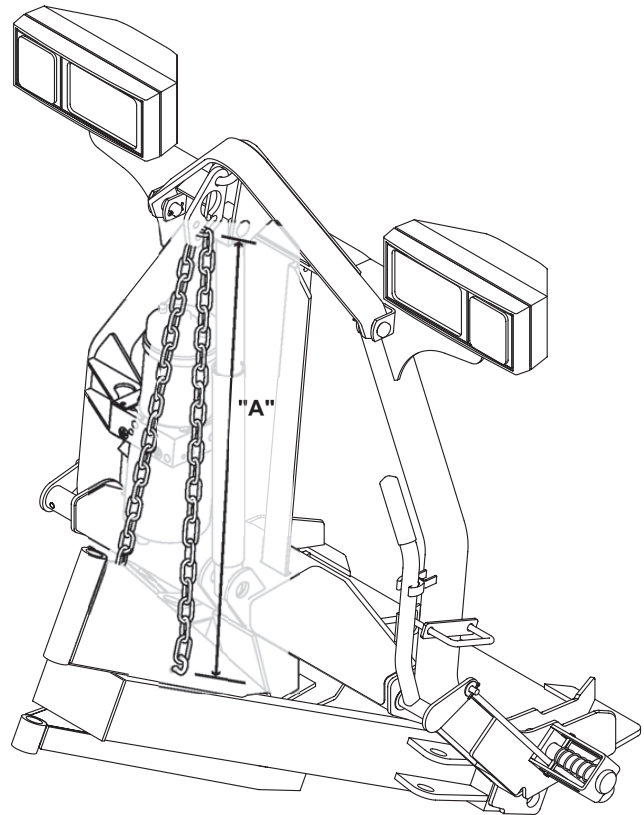

Shown with blade raised

A-Frame Adjustment Holes	Minimum Dimension "A"
Top	29.0"
Middle	28.5"
Bottom	28.0"

Fisher Engineering reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used herein. Fisher Engineering and the vehicle manufacturer may require and/or recommend optional equipment for snow removal. Fisher Engineering offers a limited warranty for all snowplows, spreaders and accessories. See separately printed page for this important information. The following are registered (®) and unregistered (™) trademarks of Douglas Dynamics, L.L.C.: FISHER®, XBLADE™.

Printed in USA