




Fish-Stik® Hand-Held Control Operating Instructions

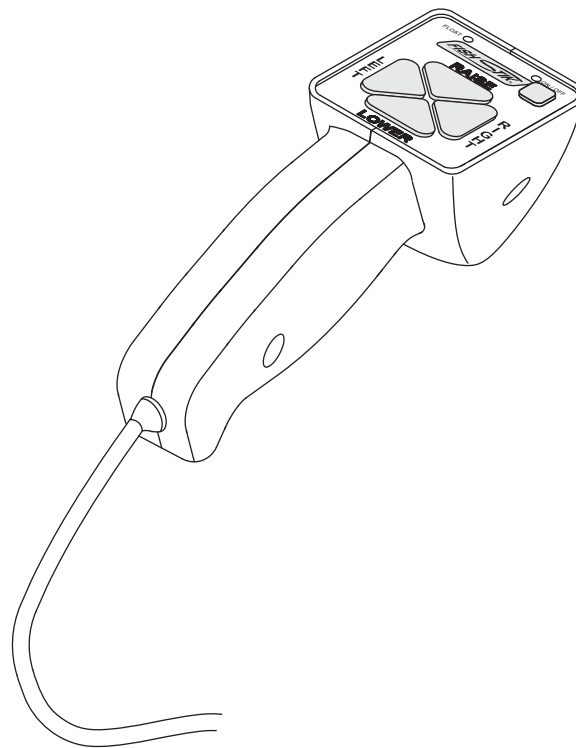


⚠ WARNING

To prevent accidental movement of the blade, always push the ON/OFF button to switch the control OFF whenever the snowplow is not in use. The power indicator light will turn OFF.

⚠ WARNING

The driver shall keep bystanders clear of the blade when it is being raised, lowered, or angled. Do not stand between the vehicle and the blade or within 8 feet of a moving blade. A moving or falling blade could cause personal injury.

1. Turn the vehicle ignition switch to the ON or the ACCESSORY position. The controller logo area illuminates.
2. Press the ON/OFF button on the control. The control indicator light glows red indicating the control is on. The control indicator light glows red whenever the control ON/OFF switch and the vehicle ignition switch are both ON. **The ON/OFF switch operates as an emergency stop when required.**
3. Press the LOWER button for 0.75 seconds to engage the FLOAT mode. The control indicator FLOAT light glows green. Cancel the FLOAT mode by momentarily pressing the RAISE button.

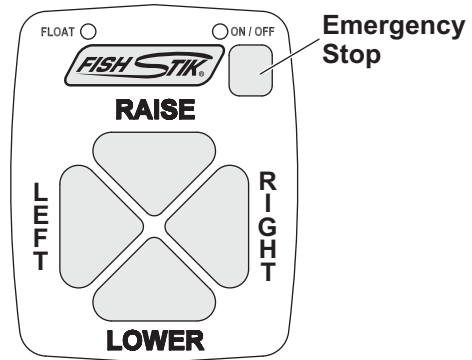

Function Time Outs

All control functions, except LOWER/FLOAT, time out (stop) automatically after a period of time. This is to limit the amount of electrical energy required from the vehicle. While the control operations are the same, the time-outs are written into the programming and vary by snowplow model.

Automatic Shutdown

The control automatically turns off after being idle for 20 minutes.

Smooth Stop

The control automatically allows the blade to coast to a stop. This results in smoother operation, reduces the shock to the hydraulic system, and increases hose and valve life.

Button	Description of Operation
ON/OFF	Press this button to turn the control ON and OFF. Turn the control OFF (power indicator light off) to lock the blade in place. This prevents accidental movement of the blade.
RIGHT	Press this button to angle the blade to the right.
LEFT	Press this button to angle the blade to the left.
RAISE	Press this button to raise the blade and to cancel the float mode.
LOWER/ FLOAT	Press this button to lower the blade. NOTE: After reaching the desired height, release the button. Holding the button down for more than 0.75 seconds activates the float mode, indicated by the green FLOAT light. The float mode allows the blade to move up and down to follow the contour of the surface being plowed.
Cancel FLOAT	Cancel the float mode by pressing the RAISE button, turning the control OFF, or turning the vehicle ignition OFF. Angling left or right momentarily cancels FLOAT.

Fisher Engineering reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, LLC.: FISHER®, Fish-Stik®.