


MOTOR RELAY KIT INSTALLATION INSTRUCTIONS

⚠ CAUTION

Overtightening terminal attaching nuts may cause seal failure, resulting in premature failure of this relay.

NOTE: Position motor relay terminals up, horizontal or in between.

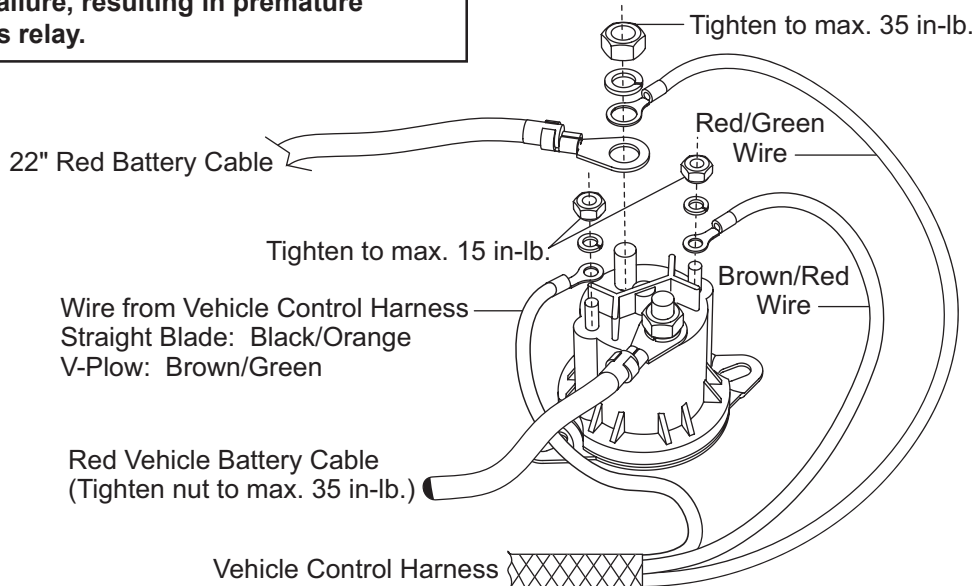

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used.

Lit. No. 29041, Rev. 00

Printed in USA


August 16, 2005

MOTOR RELAY KIT INSTALLATION INSTRUCTIONS

⚠ CAUTION

Overtightening terminal attaching nuts may cause seal failure, resulting in premature failure of this relay.

NOTE: Position motor relay terminals up, horizontal or in between.

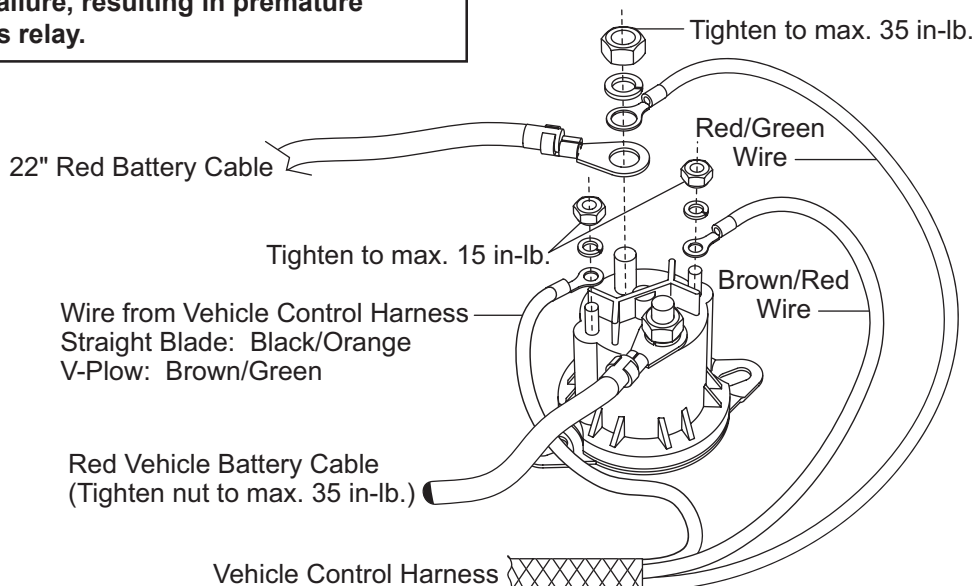

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used.

Lit. No. 29041, Rev. 00

Printed in USA

August 16, 2005