

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006

IMPORTANT

1. Remove and discard all three port plugs from ram.
2. Install fittings for driver side or passenger side application.
3. Install new plug in port opposite base end fitting. Tighten to 20-24 ft-lb. **Failure to do so may result in fluid leak.**

Lit No. 44367, Rev. 00

Printed in USA

May 1, 2006