



# CONTROL KIT

## XLS™ and XtremeV™ Joystick Control with SECURITY GUARD™ Snowplow Anti-Theft System

### OPERATING INSTRUCTIONS


#### CONTROL OVERVIEW

The SECURITY GUARD feature was developed as an electrical anti-theft system for snowplows. The system provides a deterrent from theft and/or non-permitted use by allowing you to electronically lock the snowplow's hydraulic functions.

To use this function, you must complete the "Activation" process.

Each control is equipped with an ON/OFF switch and an indicator light to show when the control is powered ON or OFF. The controls are powered by the vehicle's battery, so your vehicle ignition (key) switch must be ON to use the controls.

SECURITY GUARD System Enabled Controls Have Numbers 1 Through 4 on the Faceplate.

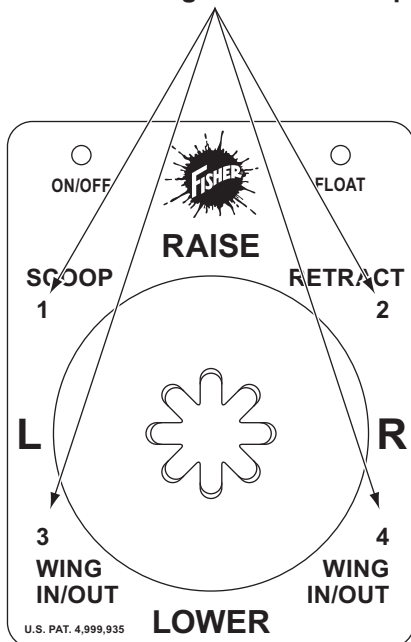


#### Before Activating the SECURITY GUARD System:

Install the control as stated in the Joystick Control Kit Installation Instructions, and check all plow functions as described below.

**⚠ WARNING**

To prevent accidental movement of the blade, always turn the ON/OFF switch to OFF whenever the snowplow is not in use. The control indicator light will turn off.

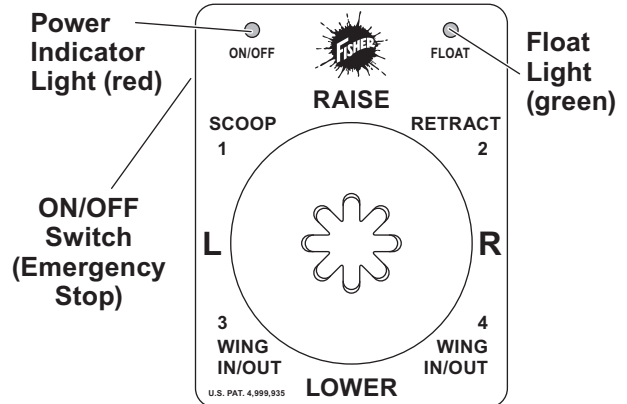

#### OPERATING INSTRUCTIONS

1. Turn the vehicle ignition switch to the ON or the ACCESSORY position.
2. Move the slide switch on the side of the control to the "ON" position. The control indicator light glows red, indicating the control is ON. The indicator light glows red whenever the control and the vehicle ignition switch are both ON and the electrical connections to the plow are completed.

The ON/OFF switch operates as an emergency stop if required.

### Function Time-Outs

All control functions, except LOWER/Float, time out (stop) automatically after a period of time. This is to limit the amount of electrical energy required from the vehicle.

While the operation of the XLS™ and XtremeV™ controls are the same, the time-outs vary.

**Note: If control function times out before desired blade movement is complete, release the lever to the center position, then move back into the desired function.**

### Automatic Shutdown

The control will automatically turn OFF after being idle for 20 minutes. To reactivate the control after a shutdown, move the ON/OFF switch to OFF, then back to ON.

### Smooth Stop


The control automatically allows the blade to coast to a stop when the lever returns to center position. This results in smoother operation, reduces shock to the hydraulic system and increases hose and valve life.

### Control Lever Movement

From the center position, the control lever can be moved in one of eight (8) directions to control various movements of the snowplow blade. To change from one movement of the blade to another, the control lever must be moved back to the center position before selection the desired function. Whenever the lever is released, it should spring back into the center position to stop any blade movement.

### Control Functions

#### Raise, Lower, Float, Angle

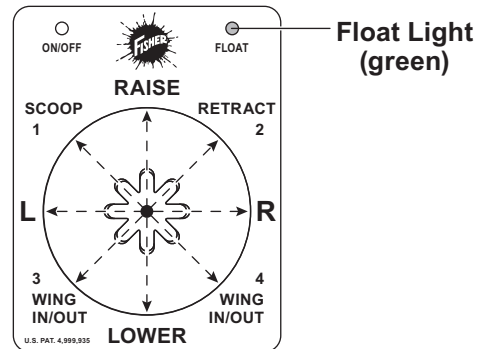

Moving the control lever in straight lines up and down or from side to side on the control body will result in the following blade movements:

Function	Description of Operation
<b>RAISE</b>	Move control lever toward top of control body to raise snowplow and cancel FLOAT mode. Function times out after 3.5 (XLS) or 4.0 seconds (XtremeV).
<b>LOWER</b>	Move control lever toward bottom of control body to lower snowplow. Release the lever to stop blade at desired height.
<b>FLOAT</b>	Move control lever to <b>LOWER</b> position and hold for 3/4 second to activate this mode. FLOAT indicator light in upper right corner of control face will illuminate. Blade will lower to ground surface and follow contour of surface as it dips or raises. Function does not time out; however, control will shut down after 20 minutes of nonuse. Press <b>RAISE</b> button momentarily to cancel FLOAT.
<b>L (Angle Left)</b>	With wings in a straight line, move control lever straight to the left to move both wings to angle left position. Left wing retracts while right wing extends to cast snow to driver's left side. Function times out after 3.25 (XLS) or 3.0 seconds (XtremeV).
<b>R (Angle Right)</b>	With wings in a straight line, move control lever straight to the right to move both wings to angle right position. Right wing retracts while left wing extends to cast snow to driver's right side. Function times out after 3.25 (XLS) or 3.0 seconds (XtremeV).
<b>1 &amp; 4</b>	Used to access the SECURITY GUARD™ system activation mode.
<b>2 &amp; 3</b>	Used to clear the SECURITY GUARD™ system activation mode.

**Note: If control function times out before desired blade movement is complete, release the lever to the center position, then move back into the desired function.**

## Scoop/Retract Blade Position

Moving the control lever from center position toward the word SCOOP or RETRACT (VEE) on the face of the control body will cause both wings to move at the same time into the following blade positions:

Function	Description of Operation
SCOOP	Move control lever toward the word SCOOP on control face to extend both wings forward into scoop position. Function times out after 5.5 (XLS) or 5.0 seconds (XtremeV).
RETRACT	Move control lever toward the word RETRACT (VEE) on control face to draw both wings into the fully retracted (vee) position. Function times out after 4.5 (XLS) or 3.0 (XtremeV).

## Wing Positions

Moving the control lever from center position toward the word WING or WING IN/OUT on either side of the face of the control body will cause either wing to move independently of the other as described below.

Function	Description of Operation
L WING & WING IN/OUT	Move control lever toward the left side of <b>LOWER</b> on the control face to move the left wing. The first time lever is moved into slot after control is turned ON, or another function is used, wing will extend. Repeated use of the lever in the same slot, without using another function, results in movement in opposite direction from previous movement. Function times out after 3.25 (XLS – IN), 3.75 (XLS – OUT), or 3.0 (XtremeV).
R WING & WING IN/OUT	Move control lever toward the right side of <b>LOWER</b> on the control face to move the right wing. The first time lever is moved into slot after control is turned ON, or another function is used, wing will extend. Repeated use of the lever in the same slot, without using another function, results in movement in opposite direction from previous movement. Function times out after 3.25 (XLS – IN), 3.75 (XLS – OUT), or 3.0 (XtremeV).

## The SECURITY GUARD™ System

### Activation & Establishing a 4-Digit Security Code

**NOTE: The snowplow must be attached to the vehicle, and all the electrical connections must be connected prior to activating the security code function.**

1. Turn the vehicle ignition switch to the "ON" or "ACCESSORY" position. (It is not necessary to start the vehicle.)
2. Verify the control power indicator is OFF. If the power indicator light is red, the control is ON. Slide the ON/OFF switch to "OFF" to turn the control OFF.
3. To activate the SECURITY GUARD mode, move the control lever into the #1 position four consecutive times, and then in the direction of the #4 position four consecutive times (sequence: 1, 1, 1, 1, 4, 4, 4, 4). The green FLOAT light will flash quickly and the red POWER light will turn ON indicating the system is ready to accept your 4-digit security code.

Enter your 4-digit security code by moving the control lever into the position of any of the eight following positions: UP, DOWN, LEFT, RIGHT, 1, 2, 3 or 4.

Once you have entered your 4-digit security code, the FLOAT light will stop flashing and the POWER light will turn OFF. This indicates that your 4-digit security code is entered and stored in the SECURITY GUARD system.

4. Once a 4-digit security code is established and the plow/vehicle electrical connection are lost/disconnected, the SECURITY GUARD system will recognize any control that has been programmed with the same 4-digit security code. Any control not programmed with the correct 4-digit security code will require the user to enter the established security code before activating the snowplow (see the Manual Unlock procedure).

**NOTE: If the control POWER switch is turned ON prior to completing the programming procedure, your 4-digit security code will be cancelled.**

**Manual Unlock**

If the SECURITY GUARD™ system is activated and you are using a control with a different 4-digit code than the established security code, you will be required to manually enter the 4-digit security code before operating a locked snowplow.

1. Turn the vehicle ignition to the "ON" or "ACCESSORY" position.
2. Turn the control to the "ON" position.
3. The POWER light will flash rapidly, indicating that the snowplow is locked.
4. Enter the 4-digit security code.
5. After entering the correct security code, the POWER light will change from flashing rapidly to a solid light to indicate the snowplow has been successfully unlocked.

**NOTE: If the plow/vehicle electrical connection is lost or disconnected, the SECURITY GUARD system will reset, requiring any control that is not programmed with the established 4-digit security code to manually re-enter the security code to activate the snowplow.**

**Clearing an Established 4-Digit Security Code**

1. Turn the vehicle ignition switch to the "ON" or "ACCESSORY" position.
2. If the snowplow is locked (the control POWER light will be flashing at a fast rate), unlock the snowplow by following the Manual Unlock procedure.
3. Turn the control to the "OFF" position. Verify that the power indicator is OFF.

4. With the control OFF, move the control lever to the #2 position four consecutive times, and then to the #3 position four consecutive times. This sequence (2, 2, 2, 2, 3, 3, 3, 3) will clear the 4-digit security code from the SECURITY GUARD system. The FLOAT light will flash to indicate that the 4-digit security code was cleared.

**NOTE: To enter a new 4-digit security code see Activation & Establishing a 4-Digit Security Code**

**Light Flash Indicators**

POWER – Red	Function
OFF	Control is OFF
Solid ON	Control is ON and active
Slow Flash	No communication
Fast Flash	Snowplow is locked – enter 4-digit security code to unlock

FLOAT – Green	Function
Solid ON	FLOAT function is active
Fast Flash	Security code activation in progress

**Additional Notes**

- The SECURITY GUARD system requires any control (other than the one with the assigned 4-digit security code) to enter the security code before the snowplow can be activated. Once the security code is established, the SECURITY GUARD system recognizes that a control with the same security code is attached, and does not require a manual unlock to activate the snowplow. The system will recognize the control as "safe" and will automatically unlock.
- In the event that a snowplow is locked and cannot be manually unlocked or reset, contact your Authorized Distributor.
- REMINDER: Record your security code for future reference.

Fisher Engineering reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Fisher Engineering or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. Fisher Engineering offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, L.L.C.: FISHER®, SECURITY GUARD™, XLS™, XtremeV™.