

78546 Fuse Kit

Installation Instructions

⚠ CAUTION

Batteries normally produce explosive gases, which can cause personal injury. Therefore, do not allow flames, sparks, or lit tobacco to come near the battery. When charging or working near a battery, always cover your face and protect your eyes, and also provide ventilation.


- Batteries contain sulfuric acid, which burns skin, eyes, and clothing.
- Disconnect the battery before removing or replacing any electrical components.

NOTE: Fuse holder and fuse are to be installed between the POSITIVE (+) vehicle battery terminal and the end of the supplied spreader vehicle battery cable assembly.

NOTE: When instructed, make all spreader battery cable connections to the auxiliary battery, if vehicle is so equipped.

NOTE: Use dielectric grease on all electrical connections to prevent corrosion. Fill receptacles and lightly coat ring terminals before assembly.

1. Turn OFF the vehicle ignition.
2. If previously connected, disconnect the spreader vehicle cable assembly and both the NEGATIVE (-) and the POSITIVE (+) vehicle battery cables from the vehicle battery terminals.
3. Remove the fuse holder cover, loosen and remove the fuse holder nuts and lock washers. Install a 60A fuse into the fuse holder.
4. Attach one end of the supplied 8" cable to the fuse holder so that the ring terminal is on top of the fuse. Replace the lock washer and nut on this terminal and hand tighten the nut.
5. Attach the red lead from the spreader vehicle battery cable to the second fuse holder terminal, placing the cable ring terminal on top of the fuse lead. Replace the lock washer and nut on this terminal and hand tighten the nut.
6. Torque the fuse holder nuts to 106–159 in-lb. Snap the fuse holder cover into place.
7. Connect the 8" cable from the fuse holder to the POSITIVE (+) battery terminal.
8. Reconnect the black cable to the NEGATIVE (-) battery terminal.

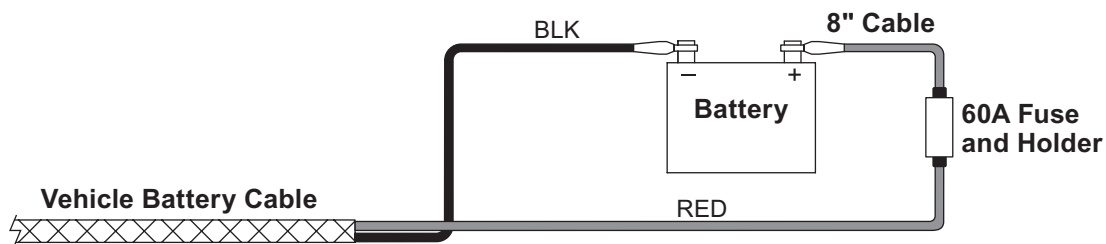

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for spreaders. Do not exceed vehicle ratings with a spreader. The company offers a limited warranty for all spreaders and accessories. See separately printed page for this important information.

Printed in U.S.A.
