




# Control Kits

## XLS™, XtremeV™, and EZ-V® (9-button) Fish-Stik® Hand-Held Control

### Operating Instructions

#### ⚠ WARNING

To prevent accidental movement of the blade, always push the ON/OFF button to switch the control OFF whenever the snowplow is not in use. The power indicator light will turn OFF.

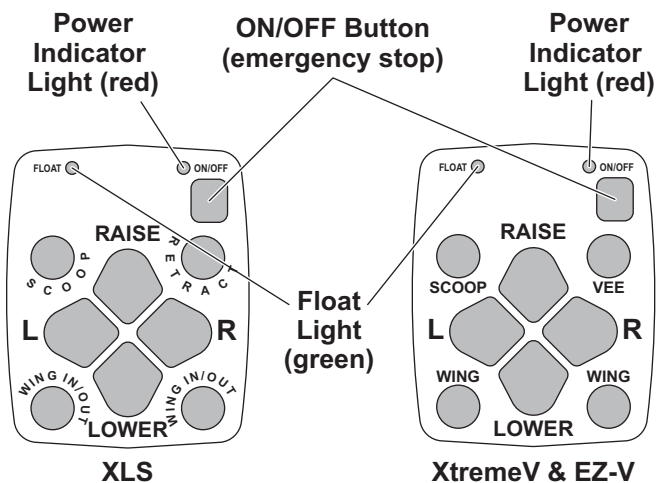

#### Function Time-Outs

All control functions, except LOWER/Float, time out (stop) automatically after a period of time. This is to limit the amount of electrical energy required from the vehicle.

While the operation of the XLS, XtremeV, and EZ-V controls are the same, the time-outs are written into the programming and vary by snowplow model.

**NOTE: If control function times out before desired blade movement is complete, release button and press again.**

The control will automatically turn OFF after being idle for 20 minutes.

#### Smooth Stop


The control automatically allows the blade to coast to a stop when the button is released. This results in smoother operation, reduces shock to the hydraulic system, and increases hose and valve life.

1. Turn the vehicle ignition switch to the ON or the ACCESSORY position.
2. Press the ON/OFF switch on the control. The control indicator light glows red, indicating the control is on. The indicator light glows red whenever the control and the vehicle ignition switch are both on and the electrical connections to the plow are completed.

The ON/OFF switch operates as an emergency stop, if required.

**Control Functions**

**Raise, Lower, Float, Angle**

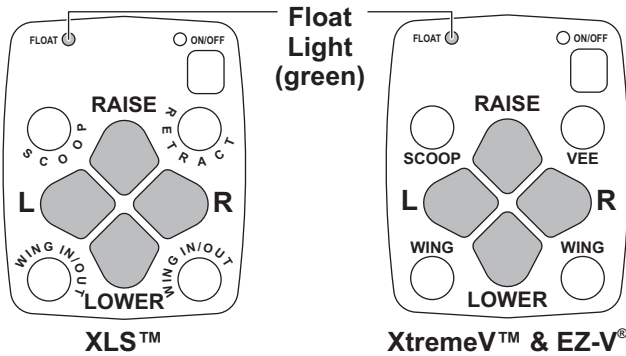


The four diamond-shaped buttons in the center of the control face, when pressed, will result in the following blade movements:

**NOTE: If control function times out before desired blade movement is complete, release the button and press again.**

Function	Description of Operation
<b>RAISE</b>	Press this button to raise snowplow and cancel FLOAT mode.
<b>LOWER</b>	Press this button to lower snowplow. Release button to stop blade at desired height.
<b>FLOAT</b>	Press <b>LOWER</b> button and hold for 3/4 second to activate this mode. FLOAT indicator light in upper left corner of control face will illuminate. Blade will lower to ground surface and follow contour of surface as it dips or raises. Function does not time out; however, control will shut down after 20 minutes of nonuse. Press <b>RAISE</b> button momentarily to cancel FLOAT. Angling left or right will interrupt (stop) FLOAT function (EZ-V only), but FLOAT will resume when angling is complete.
<b>L (Angle Left)</b>	With wings in a straight line, press <b>L</b> button to move both wings to angle left position. Left wing retracts while right wing extends to cast snow to driver's left side (V-plows).
<b>R (Angle Right)</b>	With wings in a straight line, press <b>R</b> button to move both wings to angle right position. Right wing retracts while left wing extends to cast snow to driver's right side (V-plows).


**Scoop/Retract (vee) Blade Position**

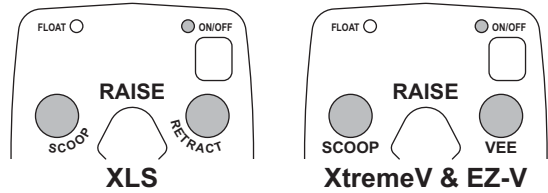

The two round buttons located to the left and right of the **RAISE** button move both wings at the same time into the following blade positions:

Function	Description of Operation
<b>SCOOP</b>	Press this button to extend both wings forward into scoop position.
<b>RETRACT (VEE)</b>	Press this button to draw both wings into the fully retracted (vee) position.

**Wing Positions**

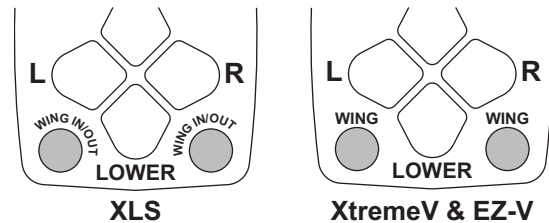

The two round buttons located to the left and right of the **LOWER** button move either wing independently of the other as described below.

Function	Description of Operation
<b>L WING &amp; WING IN/OUT</b>	Press this button on left side of control to move left wing. The first time button is pressed after control is turned on, or another function is used, wing will extend. Repeated use of the same button, without using another function, results in movement in opposite direction from previous movement.
<b>R WING &amp; WING IN/OUT</b>	Press this button on right side of control to move right wing. The first time button is pressed after control is turned on, or another function is used, wing will extend. Repeated use of the same button, without using another function, results in movement in opposite direction from previous movement.

Fisher Engineering reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, LLC.: EZ-V®, FISHER®, Fish-Stik®, XLS™, XtremeV™.