

# 29760-1 Isolation Module

## Installation Instructions



Follow the Isolation Module installation instructions included with the harness kit until directed to mount the isolation module. Use these instructions to mount the module, then follow the remaining instructions included with the harness kit.

Due to the high temperatures found in the engine compartments of some 2008 and later Ford Super Duty trucks, mounting the module behind the driver-side headlamp housing is required. Failure to do so may cause the Isolation Module to fail.

1. The module must be secured to the headlamp mounting bracket by installing recloseable fastener strips to the edge and wrapping cable ties around the module so it can be secured to the rear of the headlamp mounting bracket.

2. Be sure to position the module between the headlamp alignment pinholes and maintain a small air gap behind the Isolation Module.

Route cable tie through this loop.

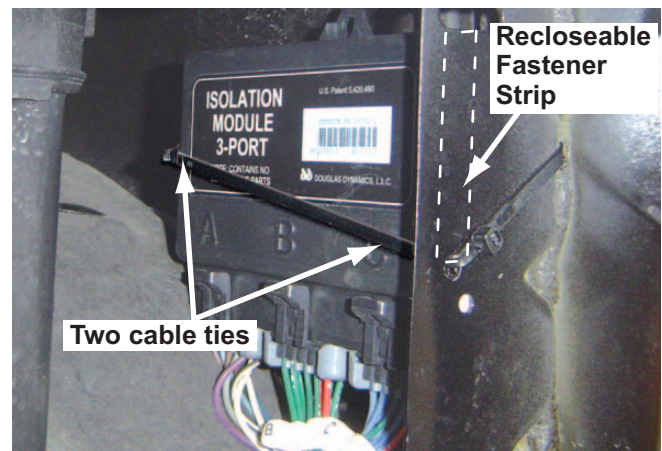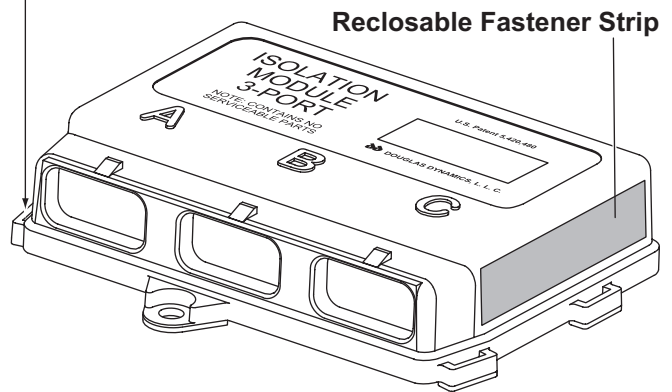

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.