

# Soft-Start Mounting Kit

## Installation Instructions

### SAFETY DEFINITIONS

#### **⚠ WARNING**

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious personal injury.

#### **⚠ CAUTION**

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**NOTE:** Indicates a situation or action that can lead to damage to your snowplow and vehicle or other property. Other useful information can also be described.

### ISOLATION MODULE INSTALLATION

#### **⚠ CAUTION**


Before installing self-drilling screws or drilling mounting holes, check the selected mounting area for any wires, hoses or other obstructions.

Isolation modules are sold separately. Check the Kit Selection Guide/Selection List for the correct module for your vehicle.


#### **2014 and Newer Chevy and GMC Vehicles 69818 Harness Kit Only**

1. The driver-side headlamp must be removed to allow access to the inside of the driver-side fender where the isolation module must be installed. Before the headlamp can be removed, the truck bumper and grille must be removed.

2. Remove the truck bumper, grille and headlamp trim. See the mount kit installation instructions for bumper, grille and headlamp trim removal steps.

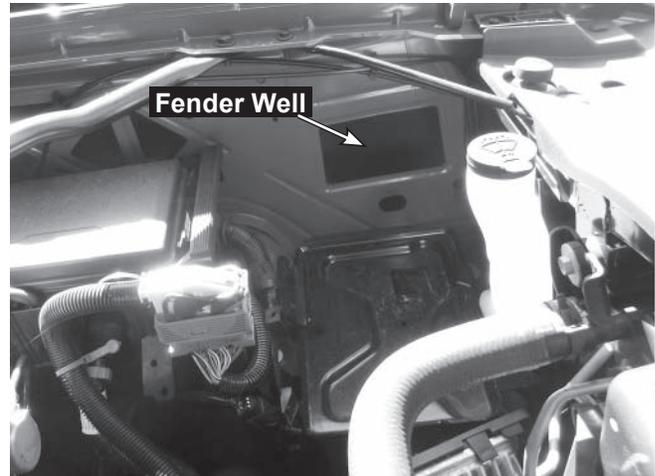


3. Install the edging material around the sides of the fender well as shown.

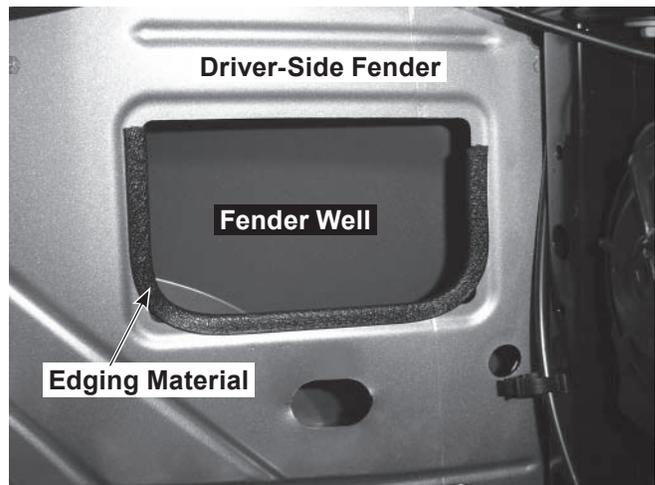


**⚠ CAUTION**

**Before installing self-drilling screws or drilling mounting holes, check the selected mounting area for any wires, hoses or other obstructions.**


- Remove the cable clip currently in place above the fender well. Drill a 5/16" hole approximately 1/2" above the existing cable clip hole.

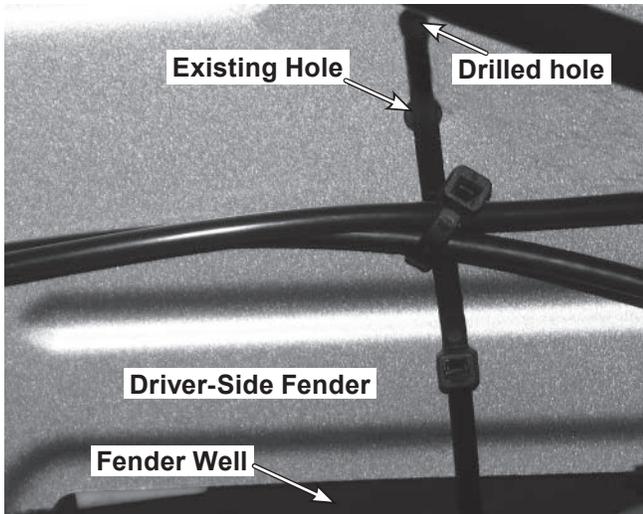

Install the isolation module on the inside of the driver-side fender using the supplied cable ties, reclosable fastener strips and edging material as shown below.

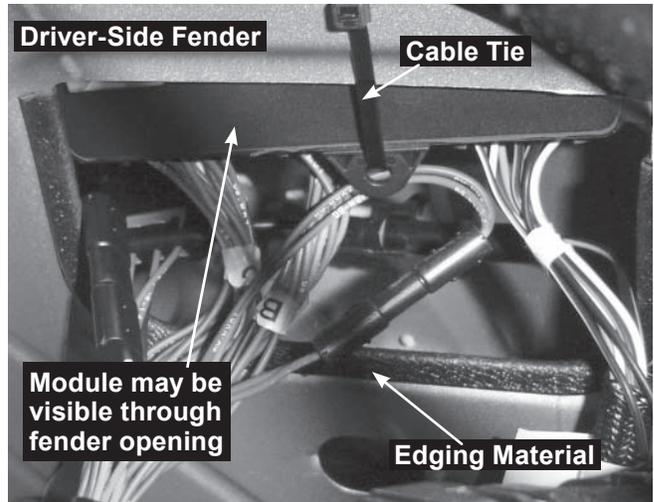

- Remove the driver-side headlamp and disconnect the harness. See mount kit installation instructions for details.
- Slide the isolation module between the driver-side fender and the outer wall.

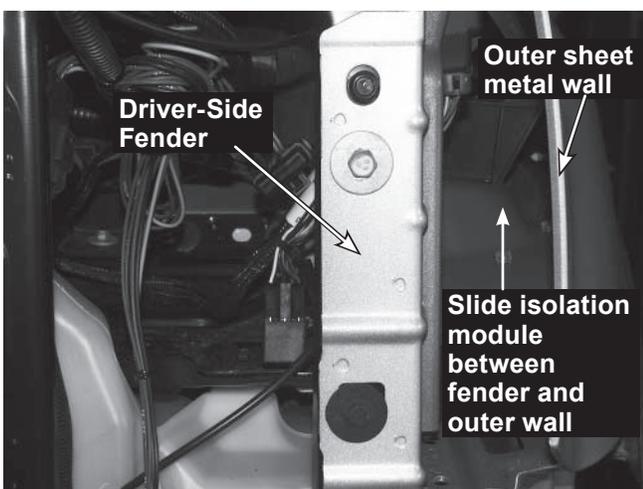

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.