


FLEXARM™

Quick Release Flexible Control Mount

For Full-size Trucks & Sport Utility Vehicles

Part # 62490

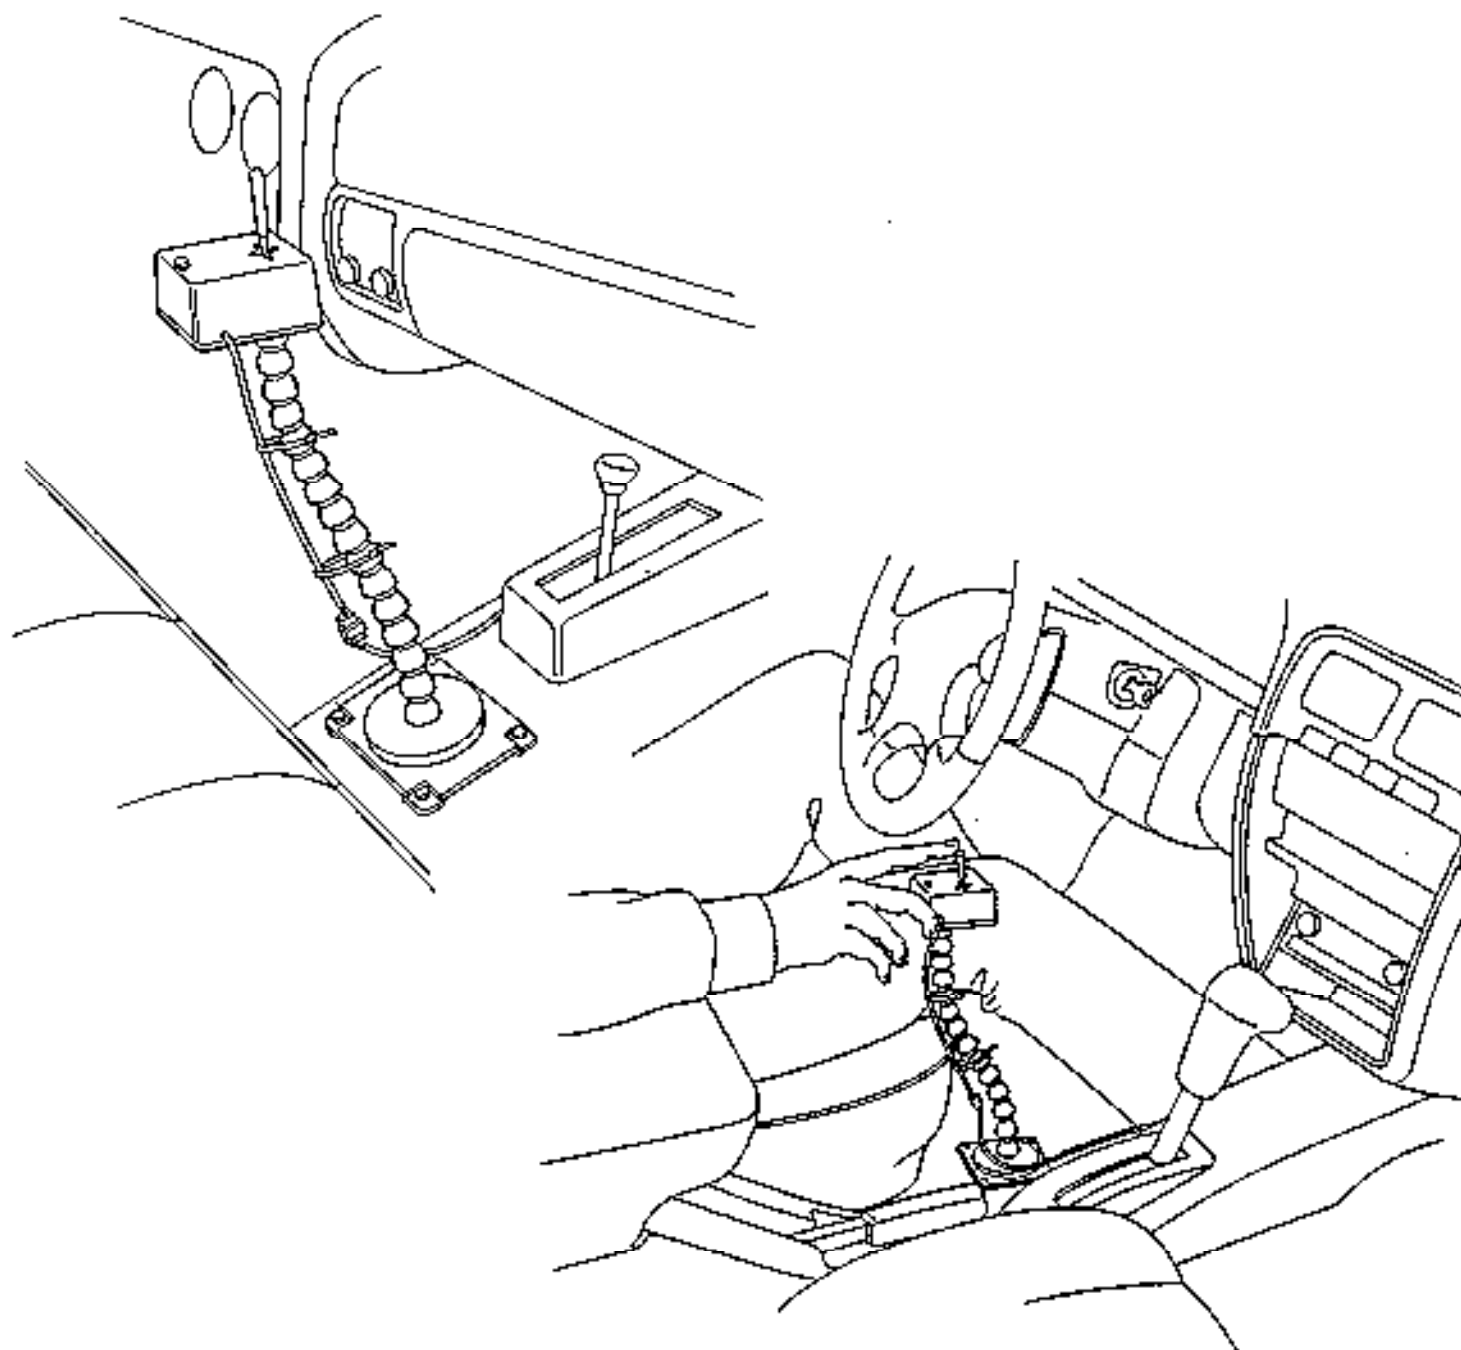



Right Where You Want It.

Package Contents:

1. Assembled Flex Arm with attached magnet.
2. One 3 x 4" mounting base plate.
3. A Vinyl Protective Disk for magnet.
4. Bag of hardware consisting of:
 - 4 self drilling tapping screws for base plate
 - 2 mounting screws for control box
 - 2 cable ties

Hand Held Control Mounting

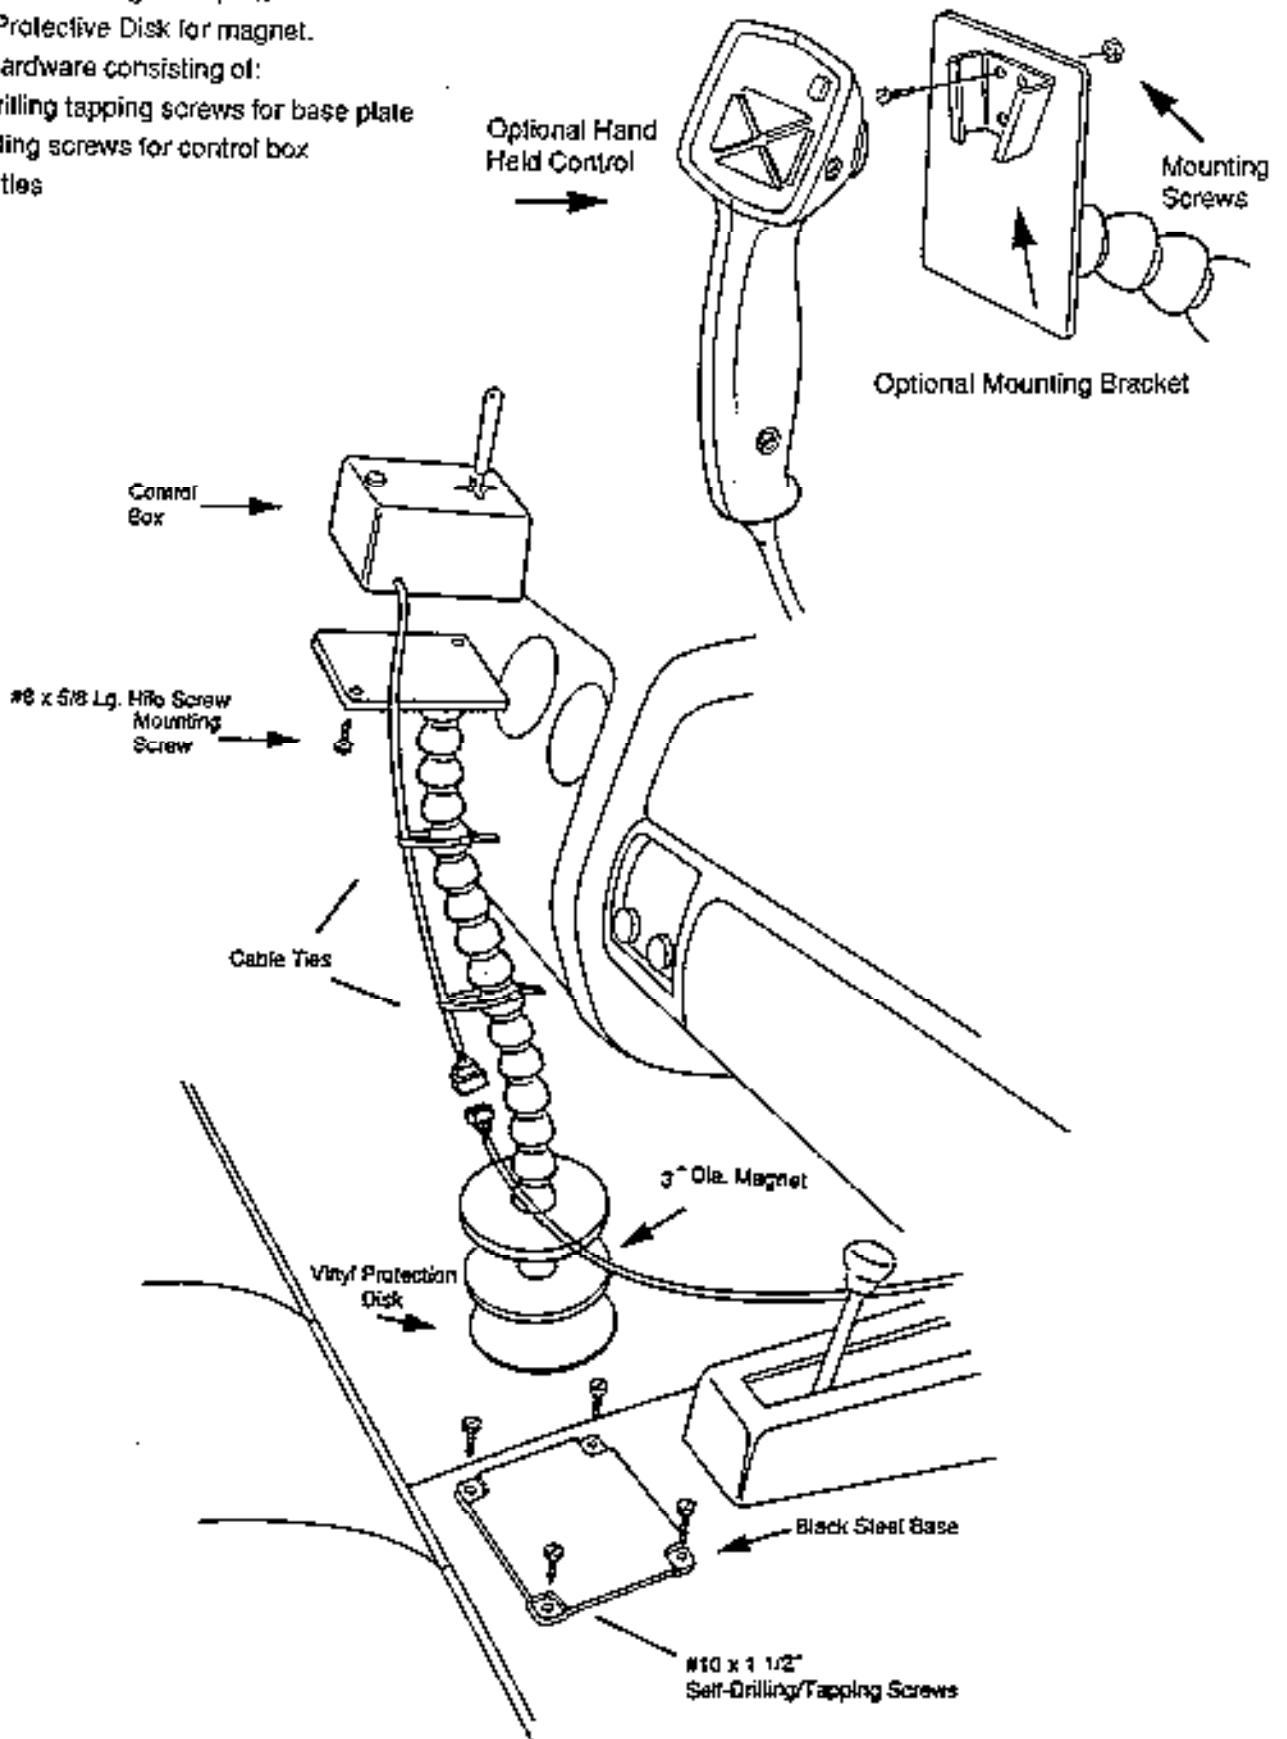

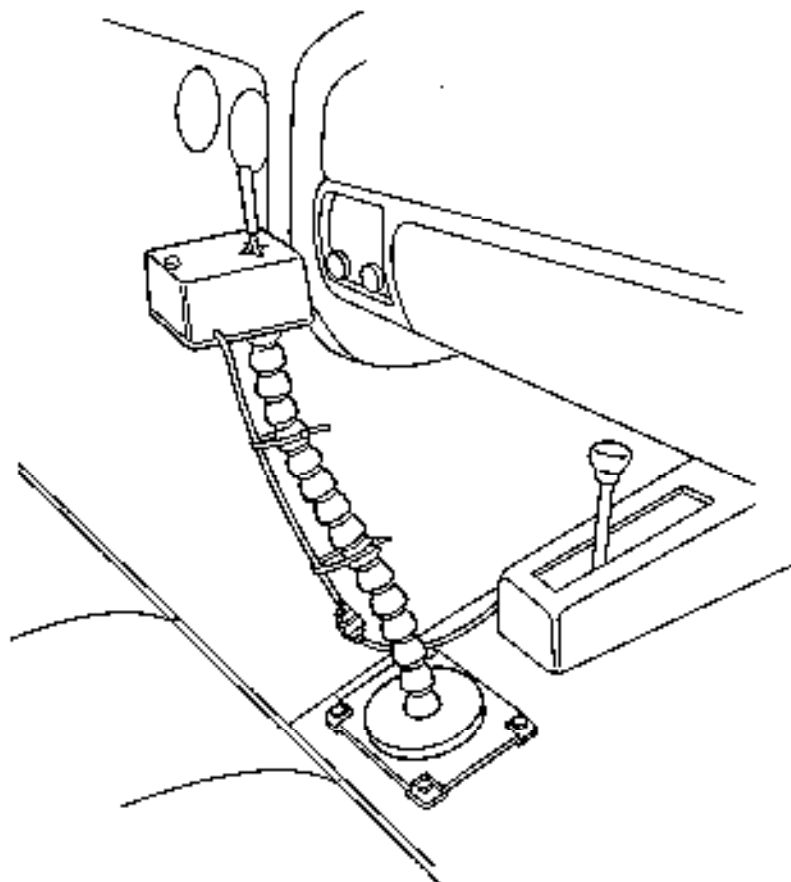

Mounting Position for Pick Up Truck


1. For installation into your truck, locate a flat surface on the center hump, directly in front of the seat or council. See CAUTION note below. Using the 4 self drilling tapping screws, drill through the floor board until all four screws are secure. **CAUTION: DO NOT OVER TIGHTEN** this will cause steel plate to buckle. If this occurs, slightly loosen two screws on one side of base to relieve pressure and flatten.
2. Peel back from Vinyl Disk and place on base magnet. Attach base magnet to the steel plate. Mount the Control Box to the Flex Arm bracket using the supplied mounting screws and/or other attaching methods such as double faced tape. Secure the power cord to the flexible arm with the cable ties.
3. Remove when not in use.

CAUTION: Before installing into Truck or Sport Utility Vehicle, ensure the underside of the vehicle has clearance in the area where the self drilling/tapping screws will be secured. This clearance needs to be a minimum of 3/4 inch. Make sure selected location will not interfere with vehicle controls and seat when adjusted for all possible user/driver positions.

ADJUSTMENTS: If Control Arm does not feel sufficiently stiff to hold the Control Box in place you may adjust this to meet your needs. Simply grasp the Flexible Control Arm with both hands, starting with the 3rd and 4th knuckles nearest to the magnet, flex knuckles back and forth several times until desired stiffness is achieved. Proceed to the 4th and 5th knuckles and repeat the process up the Control Arm until desired stiffness is achieved.

Mounting position for sport utility vehicles:

1. For installation into your Sport Utility Vehicle, position the Steel Plate on the floor board directly in front of the seat on either side of the council. See CAUTION note above. Using the 4 self drilling tapping screws, drill through the floor board until all four are secure. **CAUTION: DO NOT OVER TIGHTEN** this will cause steel plate to buckle. If this occurs, slightly loosen two screws on one side of base to relieve pressure and flatten.
2. Peel back from Vinyl Disk and place on base magnet. Attach base magnet to the steel plate. Mount the Control Box to the Flex Arm bracket using the supplied mounting screws and/or other attaching methods such as double faced tape. Secure the power cord to the flexible arm with the cable ties.
3. Remove when not in use.

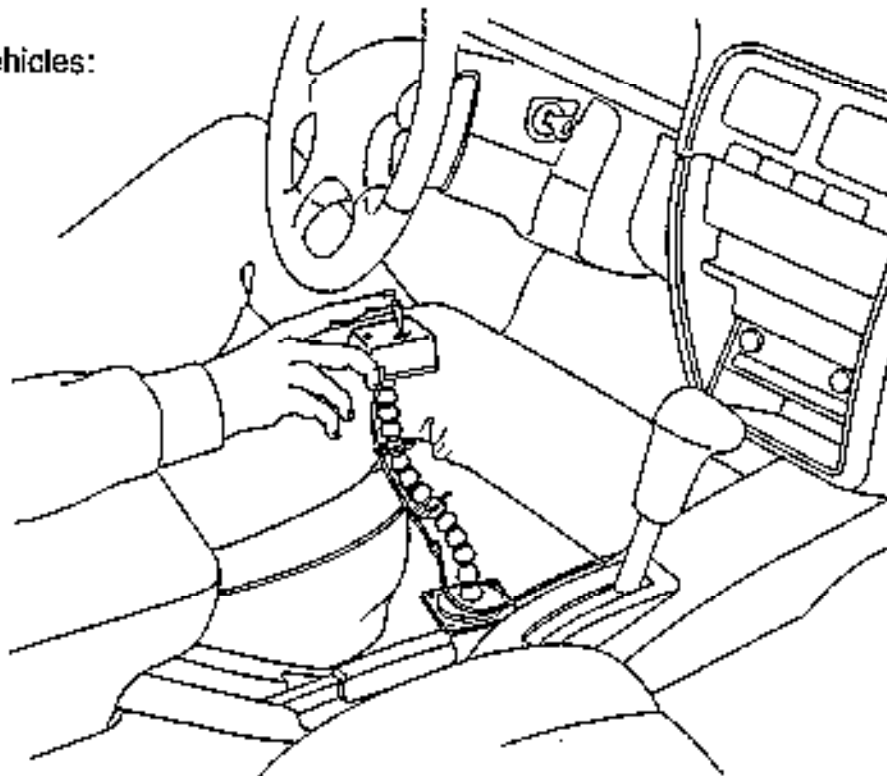

Replacement Parts available at your Local Dealer

PART	NUMBER
Base Magnet	62505
Vinyl Protection Disk	62509
Black Steel Base	62513
Hardware Kit	62514