

29760-2

Module Kit


3-Port Isolation Module

PARTS LIST

29760-2 Module Kit		
Part	Description	Qty
76272	Adapter 10-Pin Harness w/Soft-Start Module	1
29070-1	Module, 3-Port – DRL/non-DRL	1

INSTALLATION INSTRUCTIONS

1. Connect the plug-in harness to the mating connectors removed from the headlamps or headlamp housings.
2. Connect the plug-in harness to the mating connections at the headlamps or headlamp housings.
3. Route the plug-in harness to the 3-port Isolation Module.
4. Connect the plug-in harness to the adapter by matching harness connector B with adapter port B and harness connector C with adapter port C. Connect the adapter to the module by matching adapter connector B with module port B and adapter connector C with module port C.

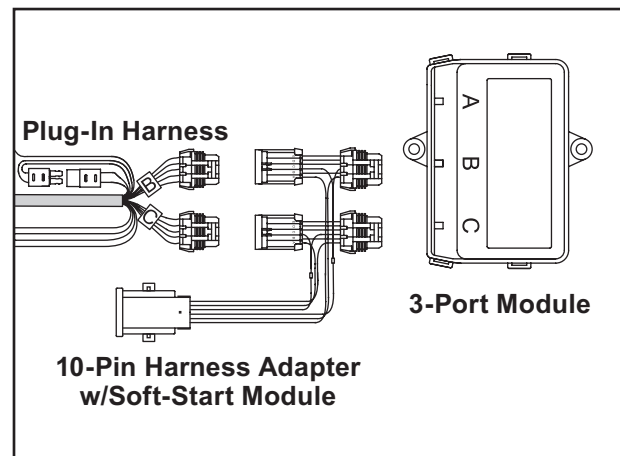

5. Mount the soft-start module in an area that receives good airflow, such as the cavity between the grille and the radiator.

Copyright © 2015 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or snowplow owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.
